


How to Read the iPERL® Quick Guide

REGISTER DISPLAY

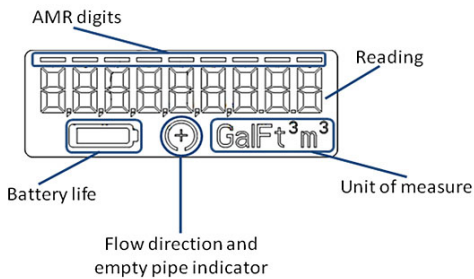

AMR Digit Bar* (4 to 8 Digits): The AMR digit bar shows which digits will be reported when the meter is read through the communications interface.

Battery Icon: The Battery Icon will turn on when the battery is low or the meter is near the end of line.


Flow Icon:

Flow Condition	Display
Positive Flow	Circle with +
Negative Flow	Circle with -
Low Flow Cut off	No icon displayed
Empty Pipe	Empty Circle


Unit of Measure*: Gallon (GAL), Cubic Feet (FT³), Cubic Meter (M³)

*AMR/AMI resolution and units of measure are programmable.

Gallons 5/8", 3/4" and 1"

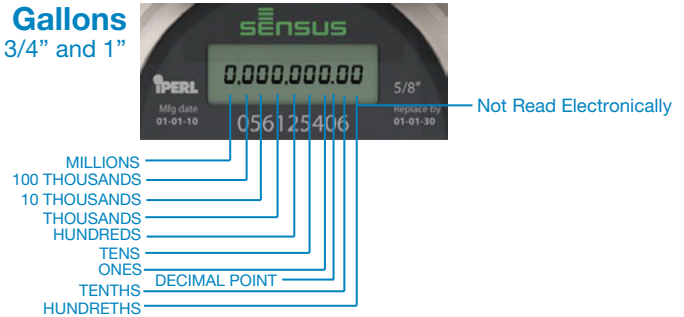

Cubic Feet 5/8", 3/4" and 1"

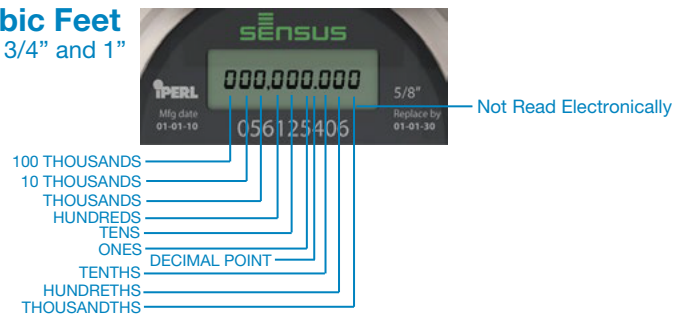

Cubic Meter 5/8", 3/4" and 1"

